

FlashLock Key Fob Battery

Key Fob Battery Replacement

- 1.1) Use a flathead screw driver to pop the back case off the Key Fob. See Figure 1.



Figure 1: *Wedge off Back Case*

- 1.2) Pull the inner assembly out and remove the button case from the circuit board. See Figure 2 for reference.

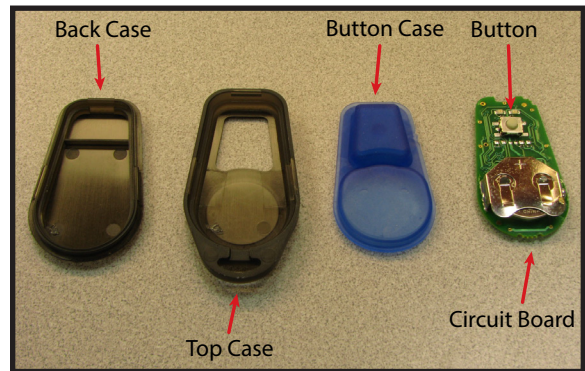


Figure 2: *Part Layout*

- 2.1) Remove the CR2032 battery from the circuit board by pushing through the bottom. See Figure 3. Be careful not to damage the circuit board.
- 2.2) Replace the battery with positive face oriented upward. Push the battery in until fully seated. See Figure 3 for reference.
- 2.3) Check functionality by pressing the button. LEDs will light if the battery is connected.

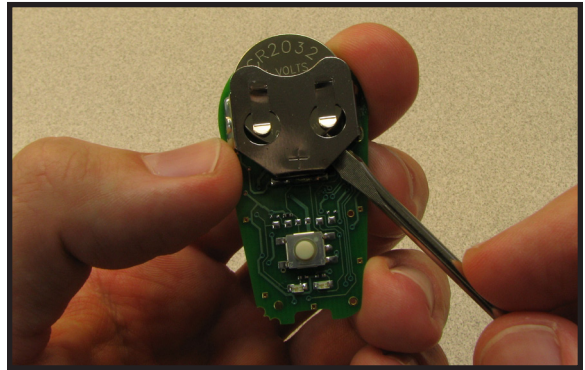


Figure 3: *Remove Battery*

- 3.1) Set the circuit board into the back case. See Figure 4.



Figure 4: *Set Board in Back Case*



(212) 732-4658
sales@tecsci.com
www.tecsci.com

463 FIFTH STREET, HOBOKEN, NJ 07030

PROPRIETARY INFORMATION
Property of VIDEX INC.
Unlawful to copy, reproduce, or
disclose to others by any means
without express written consent of
VIDEX

TITLE:

**FlashLock Battery Replacement
Field Instruction Manual**

SHEET

2

GCO

3763

FlashLock Key Fob Battery

- 3.2) Press the button case down over the assembly. Make sure the lip is fully pressed into the back cover to ensure a water-resistive seal. See Figure 5.
- 4.1) Snap the top case into place.

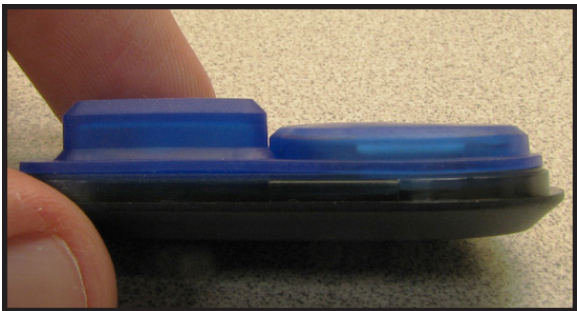


Figure 5: Set Button Seal

For further questions and assistance, please contact
TEC Solutions Support by email at
support@tecsolutionsinc.com or by calling 888-289-8811