

FlashLock Mortise Battery



FlashLock Battery Replacement

Note: Note the positioning of the screw hole and the beeper hole in relation to the two LEDs shown in Figure 6. DO NOT insert wrench into beeper hole.

- 1.1) Use a FlashLock T6 Torx wrench (HDM1893) to loosen the set screw as shown in Figure 7. Rotate the wrench clockwise from the front of the lock.

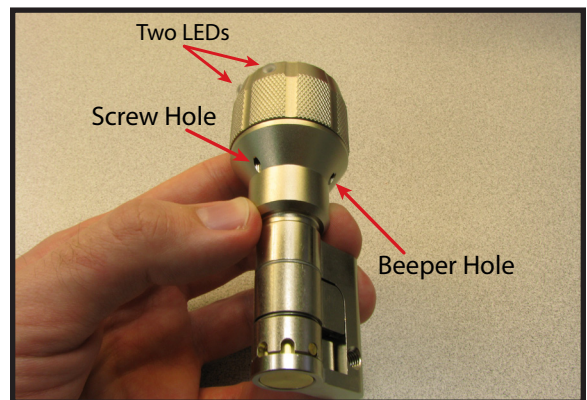


Figure 6: *Screw and Beeper Hole*

- 1.2) Unscrew the knob cap and set aside.

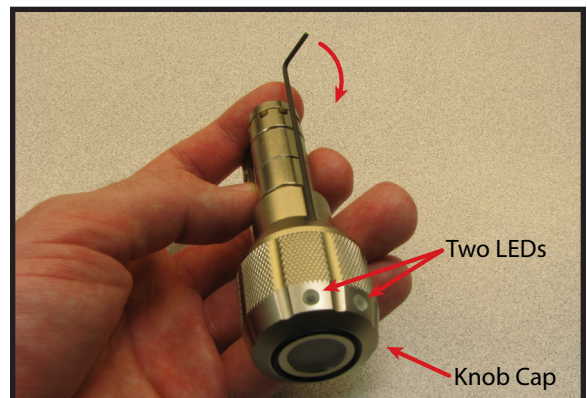


Figure 7: *Loosen Set Screw*



(212) 732-4658
sales@tecsci.com
www.tecsci.com

463 FIFTH STREET, HOBOKEN, NJ 07030

PROPRIETARY INFORMATION
Property of VIDEX INC.
Unlawful to copy, reproduce, or
disclose to others by any means
without express written consent of
VIDEX

TITLE:

**FlashLock Battery Replacement
Field Instruction Manual**

SHEET

3

GCO

3763

FlashLock Mortise Battery

- 2.1) Flip the circuit board up to access the battery. See Figure 8.
- 2.2) Replace the EL123 battery, inserting the new one negative side down.
- 2.3) Lightly depress the battery to make sure it has full contact with the spring.
- 3.1) Tuck the wires from the circuit board into the shell to one side and seat the board, aligning the post through the hole in the board.



Figure 8: Battery Access

- 3.2) While pressing down on the board, tilt the side opposite the post up to create temporary tension to keep board in place. See Figure 9. The board should light up and beep when it touches the battery.
- 4.1) Screw on the knob cap. If the cap does not screw on easily, check that the board is still set over the post and repeat Step 3.2 if necessary.

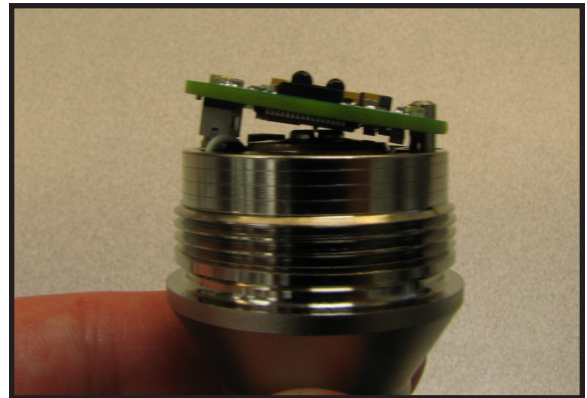


Figure 9: Skewed Circuit Board on Post

- 5.1) With the cap fully set and looking at the top of the lock, the groove between the two LEDs must be aligned with the punch mark. Adjust as needed. See Figure 10.
- 6.1) Tighten screw as in Step 1.1, turning the wrench counter-clockwise as looking at the front of the lock.
- 6.2) Test the lock for functionality, verifying that the cap is locked in place and unlocks with a key fob.

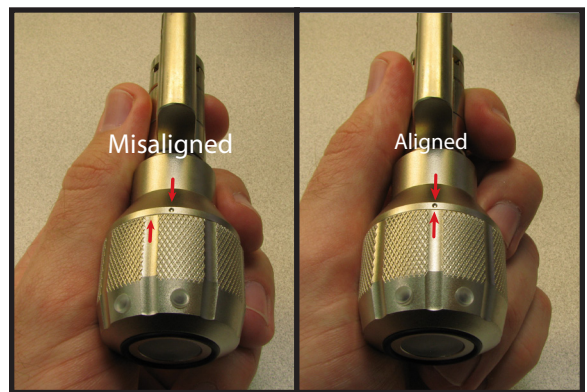


Figure 10: Aligning the Groove

For further questions and assistance, please contact
TEC Solutions Support by email at
support@tec solutionsinc.com or by calling 888-289-8811.



(212) 732-4658
sales@tecsci.com
www.tecsci.com

463 FIFTH STREET, HOBOKEN, NJ 07030

PROPRIETARY INFORMATION
Property of VIDEX INC.
Unlawful to copy, reproduce, or
disclose to others by any means
without express written consent of
VIDEX

TITLE:

**FlashLock Battery Replacement
Field Instruction Manual**

SHEET

4

GCO

3763